



# Gym Divider Curtains

## Operation and Maintenance

### Caution

- Never work alone when inspecting superstructure or high wall attachments.
- Consult installation instructions and project drawings for information on part numbers and placement.
- When calling with questions, please provide order number, and, if possible, project drawing provided with your gym curtain.

### Operation

- Make sure gym curtain can be seen from which location or, if using electric winches, from key switch location.
- Only qualified personnel should operate gym curtains.
- Keep objects that may interfere with gym curtain operation out of the way.
- Do not operate gym curtains while maintenance or repair work is being done.
- Keep keys for key switches in a safe place. If one of the keys is lost, contact your dealer for a replacement.
- Gym curtains do not have to be fully raised or lowered before changing direction of fold.
- Use winches only for their original purpose; if equipment changes are necessary, contact your dealer.
- If you encounter a problem during installation or operation of your curtain, contact your dealer immediately.

### Maintenance/Inspection

NOTE: Gym divider curtains by Practice Sports are designed to last for many years with a minimum of maintenance. However, you should periodically inspect your gym curtains to ensure they are in good repair and operating properly. Check curtains at least once a year, depending on amount of use.

You will find on page 2 a maintenance checklist. Detach, make copies and hang this list in a convenient location to help keep track of inspections and repairs.

If you encounter problems, or need to replace any parts, contact your dealer or Practice Sports.

### Winches

- Examine cable drum on winch for excessive wear or looseness. Ensure cable is wrapping correctly, and that “stacking” (cable wrapping unevenly) does not occur.
- Check key switch operation. Make sure keys work properly, and that winches respond correctly.
- Make sure winch is still properly anchored. Make sure anti-rotation bolts are installed. If winch has slipped slightly, correct and tighten bolts using an impact wrench.

**Please Note:** No periodic application of grease or oil is required.

### Cables/Belts

- Check cable grommets for excessive wear or looseness. Make sure cable is still passing properly through the grommet.
- Inspect cable clamps for tightness; Make sure there is no slippage.
- Check aircraft cable for fraying. (Hint: One way to do this is by running an oily rag along the aircraft cable. The rag will snag on frays; it will also lubricate the cable). If fraying is encountered, contact your dealer or Practice Sports for replacement.

**7 U hcb. Wear gloves when checking for frays!**

### Gym Curtain

- Inspected curtain attachment and superstructure. Make sure all bolts and clamps are tight and have not shifted.
- Work your way across the curtain, making sure all clamps are tight and in their original positions. Check for cracks, corrosion or other signs of damage or excessive wear.
- Inspect vinyl and mesh for tears or worn areas.
- Use carpenter’s level to make sure gym curtain is still vertically plumb, and that bottom pipe is horizontally level.
- If you encounter problems, or need to replace any parts, contact your dealer or Practice Sports.

### Replacement/Repairs

It is highly recommended that repairs or replacement of defective/worn parts be carried out by a qualified installer. Contact your dealer or Practice Sports to order replacement parts or obtain installers in your area.



# CAUTION

ONLY TRAINED AND AUTHORIZED PERSONNEL SHOULD OPERATE THIS EQUIPMENT. OPERATION BY UNTRAINED OR UNAUTHORIZED PERSONNEL MAY RESULT IN DAMAGE TO THE CURTAIN OR CURTAIN STRUCTURE AND/OR INJURY TO ANYONE NEAR THE CURTAIN.

ALWAYS MAKE SURE AREA AROUND AND BELOW THE CURTAIN IS CLEAR OF PERSONNEL AND OBSTACLES BEFORE OPERATING THE DEVICE.

NEVER STAND DIRECTLY UNDER THE CURTAIN DURING OPERATION.

OPERATOR MUST KEEP CURTAIN IN VIEW AT ALL TIMES DURING OPERATION.

KEY SWITCH OR CONTROL PAD MUST BE MOUNTED IN CLEAR VIEW OF THE CURTAIN.

NEVER LEAVE KEY IN KEY SWITCH UNATTENDED.

NEVER SWING OR SWAY THE CURTAIN.

NEVER HANG FROM SIDES OR BOTTOM BATTEN OF CURTAIN DURING OPERATION OR WHEN CURTAIN IS IN THE LOWERED POSITION.

CAUTION SHOULD BE EXERCISED AT ALL TIMES WHEN OPERATING THE CURTAIN.

ALWAYS FOLLOW PROPER SAFETY RULES.